MWR Techstream Installation Guide

These instructions are for installing Techstream version 16.00.017 to your computer. This installation has been tested for Windows versions up to Win10. It is only verified for the J2534 cable sold on our website. (VCI-J2534).

Step 1: Download the zipped folder from our website. (Techstream Install Files.zip)

Step 2: Extract the zipped folder with the four files in it. It should look like this:

XHorse Electronics	6,770,775	4,915,535	File folder		
1 - Techstream_Setup_V16.00.017.exe	247,675,072	242,886,157	Application	2/16/2021 3:32 ...	5D0E3196
2 - TS_loader.exe	382,464	200,818	Application	5/2/2019 5:04 ...	BA452DDF
mvci-x64.reg	1,784	531	Registration Entries	9/14/2013 8:19 ...	A0ED77C2

Step 3: Run file 1 (Techstream_Setup), follow the instructions through the install wizard. This installation may take a few minutes.

Step 4: DO NOT RUN TECHSTREAM YET. A desktop shortcut icon should have been made, right click the shortcut and select properties.

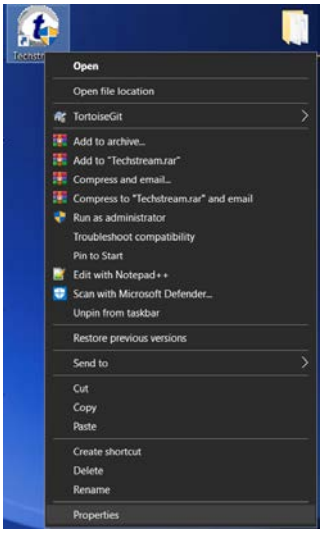

Step 5: Select “Open File Location”

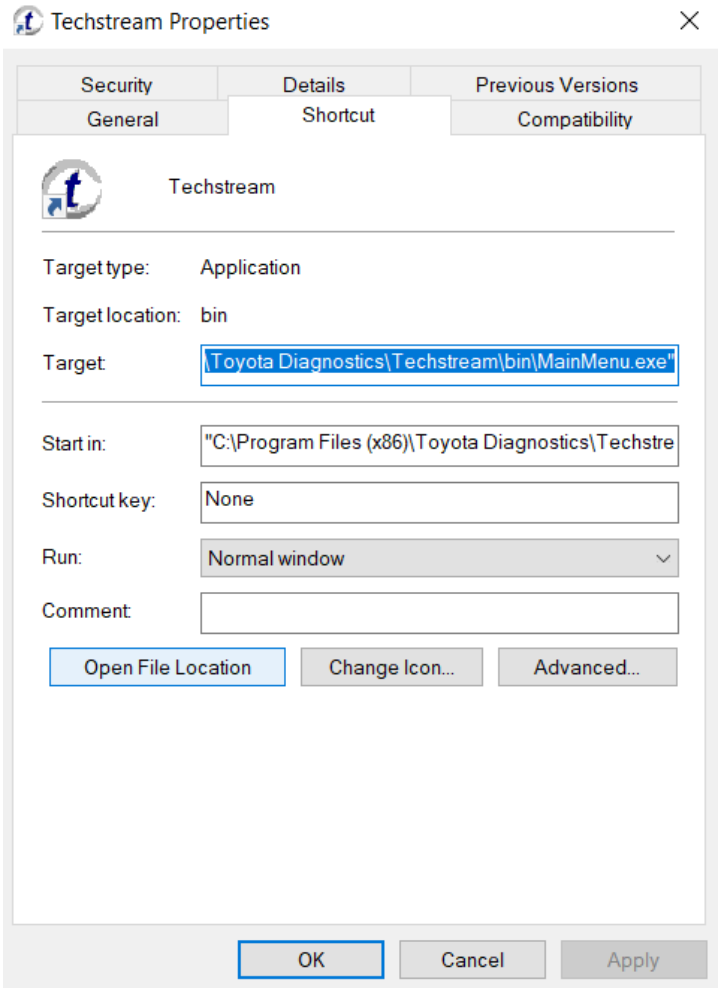

A screen similar to this should open:

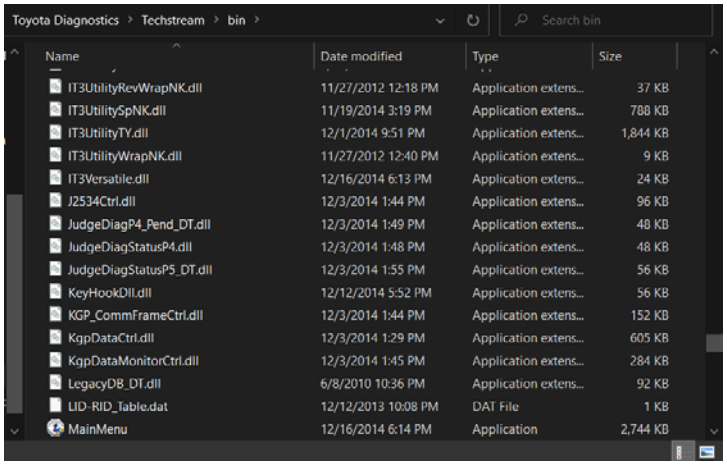

Step 6: From the downloaded files, copy file “2 - TS_loader” to this new folder where techstream is installed. You should see the following.

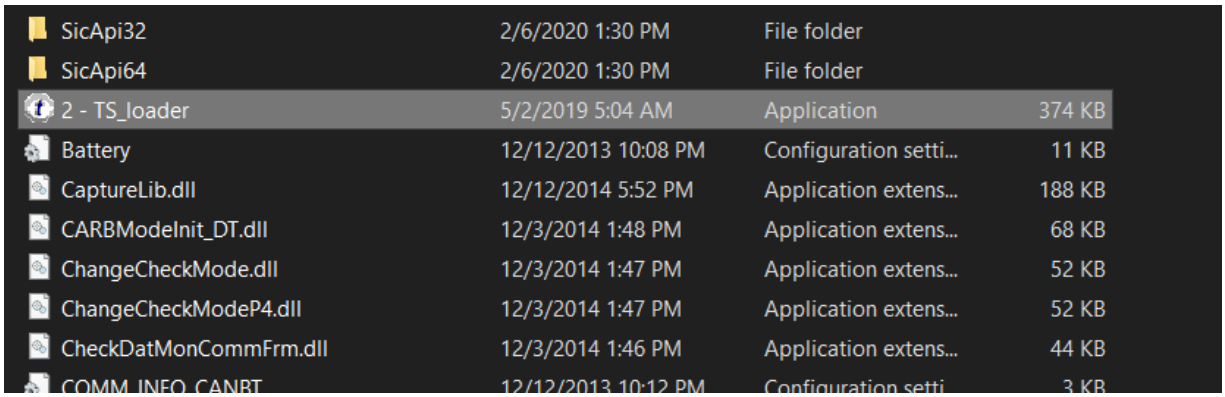

Step 7: Right click this file and select “Create Shortcut”

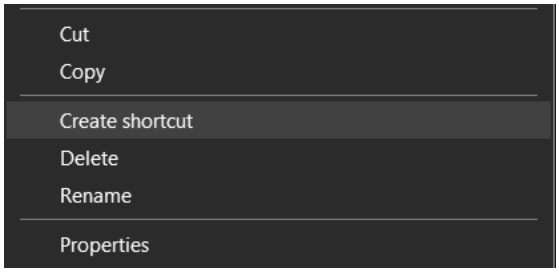

Step 8: Move this file to your desktop, you may pin it to your taskbar as well. This is the file you will be running to use Techstream

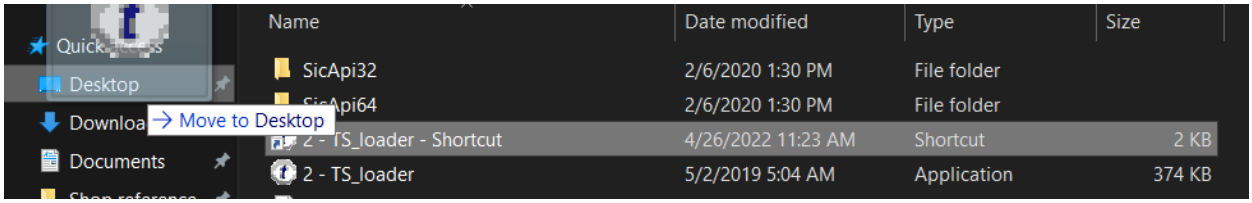

Step 9: Run this file. You may come across an error such as this, simply click no, it does not affect the program.

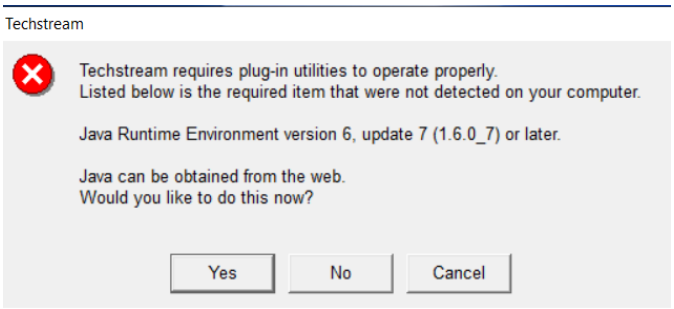

Step 10: Follow the prompts for area and language selection. For the Techstream configuration screen, fill in the values as follows:

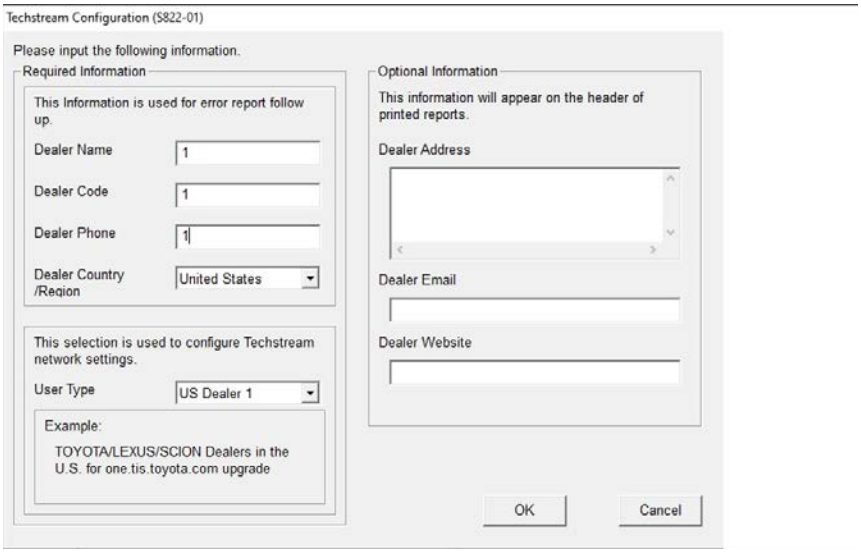

Step 11: Navigate to C:/Program Files x86, copy and paste the directory XHorse Electronics from the files downloaded.

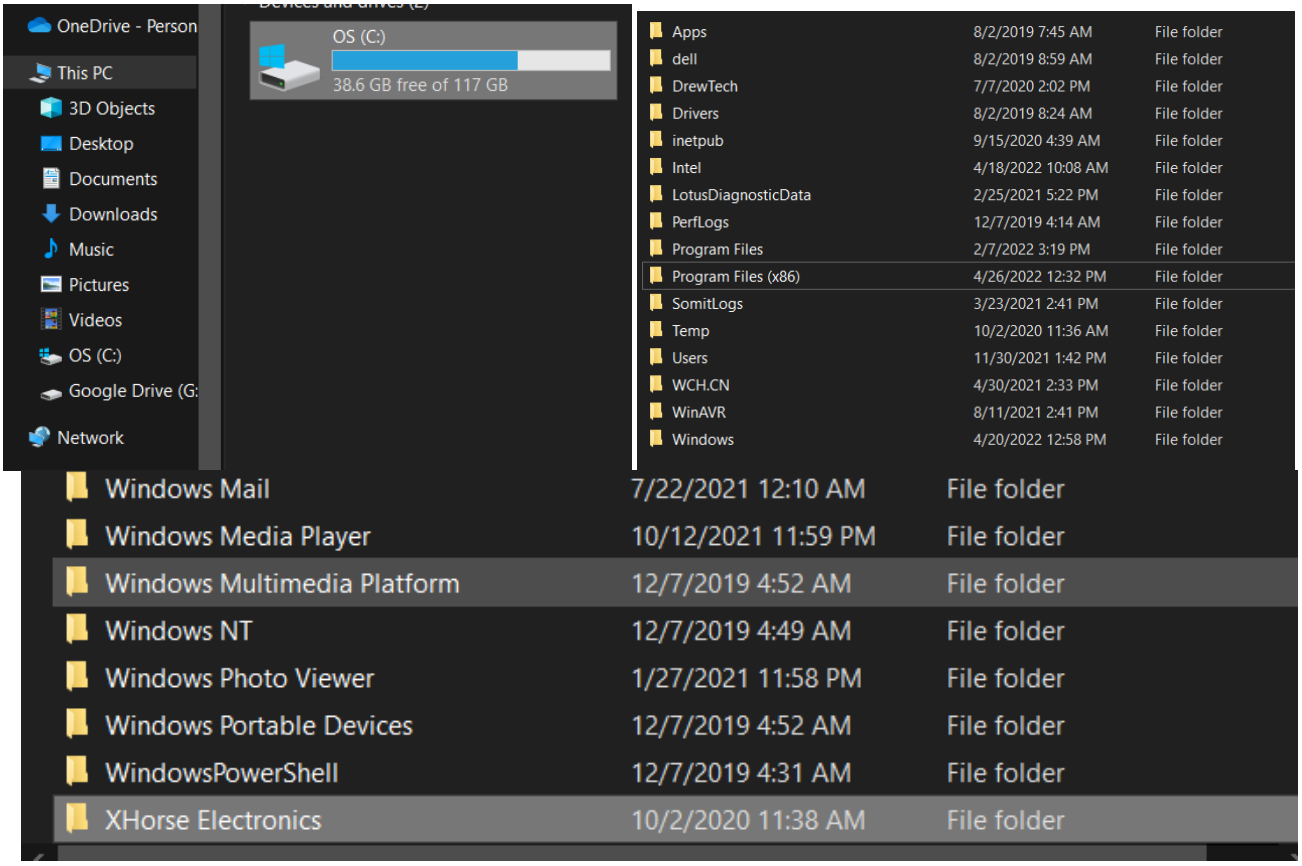

Step 12: Run file “mvci-x64” It will ask if you would like to proceed, select yes.

Step 13: Connect your Techstream cable to your computer and run Techstream through the shortcut created earlier. On the opening screen, select Setup -> VIM Select, then choose “XHorse – MVCI” You may need to restart your computer for the changes made to take effect.

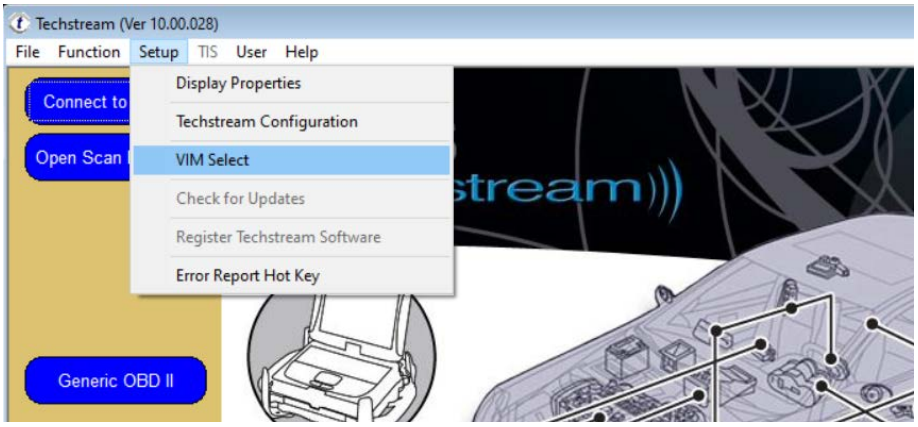

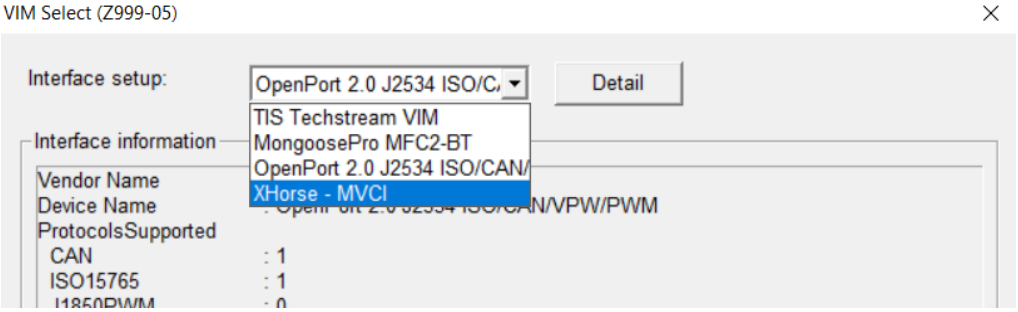

Step 13: Attempt to connect to your vehicle, if everything is successful the following screen or one similar should appear.

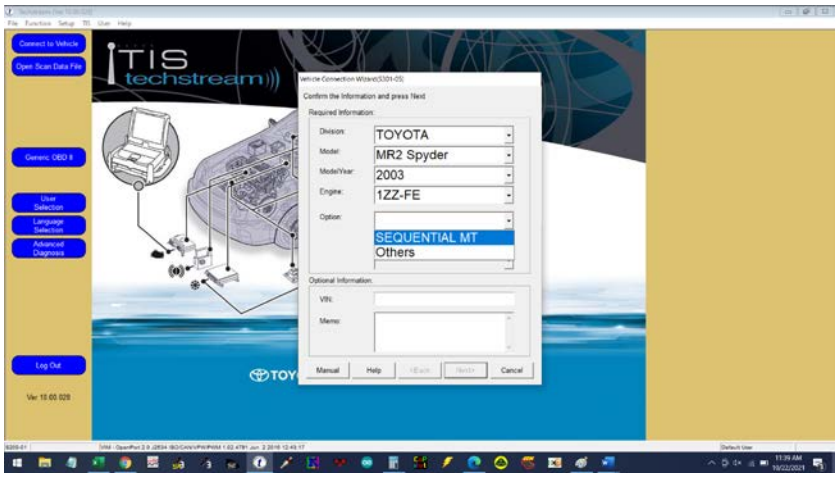

See our website or others for usage instructions or how to use Techstream for various Toyota functions.