


## Evora ECM Pinout - Monkeywrench Racing

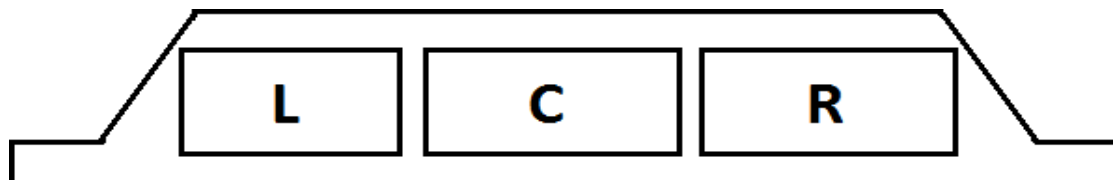

Connector L								Connector C								Connector R															
H4	G4	F4	E4	D4	C4	B4	A4	A1	B1	C1	D1	E1	F1	G1	H1	J1	K1	L1	M1	A1	B1	C1	D1	E1	F1	G1	H1	J1	K1	L1	M1
H3	G3	F3	E3	D3	C3	B3	A3	A2	B2	C2	D2	E2	F2	G2	H2	J2	K2	L2	M2	A2	B2	C2	D2	E2	F2	G2	H2	J2	K2	L2	M2
H2	G2	F2	E2	D2	C2	B2	A2	A3	B3	C3	D3	E3	F3	G3	H3	J3	K3	L3	M3	A3	B3	C3	D3	E3	F3	G3	H3	J3	K3	L3	M3
H1	G1	F1	E1	D1	C1	B1	A1	A4	B4	C4	D4	E4	F4	G4	H4	J4	K4	L4	M4	A4	B4	C4	D4	E4	F4	G4	H4	J4	K4	L4	M4

L		C		R	
A1		A1		A1	
A2	Intake Cam Sensor 2	A2	Exhaust Cam VVT 1	A2	Fuel Level Sender Signal
A3	Intake Cam Sensor 1	A3	Intake Cam VVT 2	A3	Main/HVAC Thermister
A4	Crank Sensor -	A4	Exhaust Cam VVT 2	A4	PPS2
B1		B1	ACIS Solenoid	B1	Clutch Pedal Signal
B2	Crank Sensor +	B2	Intake Cam VVT 1	B2	
B3	Cam Ground	B3	Purge Solenoid	B3	
B4		B4		B4	PPS1
C1	AC Compressor Speed+	C1	Knock Sensor 1 +	C1	AC Switch
C2	AC Compressor Speed-	C2	Knock Sensor 2 +	C2	Rad Fan Switch
C3		C3	Coolant Temp Sensor -	C3	Sport Mode Switch
C4		C4	Throttle Body Ground	C4	Brake Lamp Switch
D1	Cam VREF	D1	Knock Sensor 1 -	D1	Ignition Crank Signal
D2		D2	Knock Sensor 2 -	D2	Traction Control Switch
D3	Exhaust Cam Sensor 2	D3	Oil Pressure Switch	D3	
D4	Exhaust Cam Sensor 1	D4		D4	
E1		E1		E1	Main Relay Signal
E2		E2		E2	Fan Relay #2 Signal
E3	Coil #6	E3	IAT Signal	E3	Clock Spring(Steering wheel switch)
E4	Coil #5	E4	Throttle Body +5v	E4	
F1	Coil #4	F1		F1	Fan Relay #3 Signal
F2	Coil #3	F2	TPS1A	F2	AC Compressor Relay Signal
F3	Coil #2	F3	TPS1B	F3	Throttle Pedal +5v
F4	Coil #1	F4		F4	Clutch Pedal +5v
G1		G1	MAF Signal	G1	Crank Relay +
G2		G2	Coolant Temp Sensor +	G2	RPM Signal to ICM
G3	Injector #6	G3	Pre O2 Sensor 1 Signal	G3	
G4	Injector #5	G4	Pre O2 Sensor 2 Signal	G4	
H1	Injector #4	H1	Post O2 Sensor 1 Signal	H1	
H2	Injector #3	H2	Post O2 sensor 2 Signal	H2	Fuel Pump Relay
H3	Injector #2	H3	Pre O2 Sensor 1 Heater Ground	H3	CAN L (TPMS)
H4	Injector #1	H4	Pre O2 Sensor 2 Heater Ground	H4	CAN H (TPMS)
		J1		J1	
		J2	Pre O2 Sensor 1&2 Ground	J2	Traction Control Signal
		J3	IAT Ground	J3	CAN L
		J4	MAF Ground	J4	CANH
		K1	Post O2 Sensor 1 Heater Ground	K1	
		K2	Post O2 Sensor 2 Heater Ground	K2	Sport Mode Signa
		K3	AC Control Valve	K3	Sensor Ground
		K4	Post O2 Sensor 1&2 Ground	K4	Throttle Pedal Ground
		L1		L1	
		L2	DBW1-B	L2	EMS Ground
		L3		L3	EMS Ground
		L4	V.I.M Solenoid	L4	EMS Ground
		M1	DBW1-A	M1	Hot Soak Pump
		M2		M2	Power
		M3		M3	Power
		M4		M4	Power